SCOSCHE

TA2114B

IN-DASH STEREO INSTALLATION KIT FOR 2012-UP TOYOTA PRIUS C

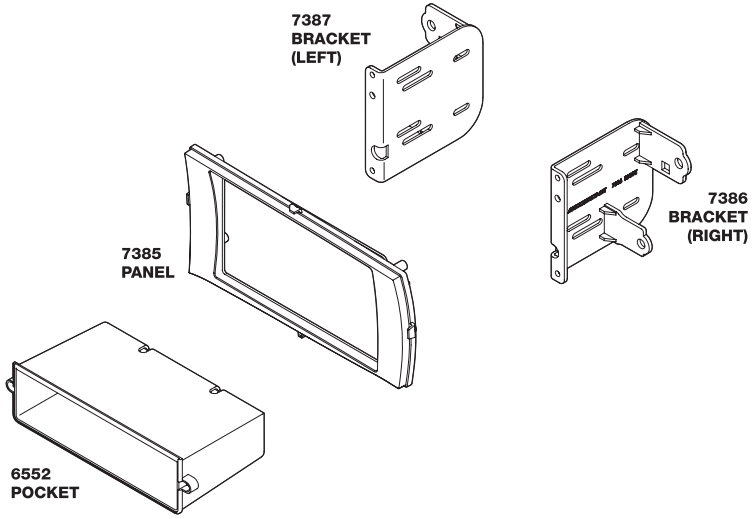

INTRODUCTION/PRELIMINARY

This premium installation kit is for 2012-Up Toyota Prius C vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS	TA02B	LSAAB
PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS. **TA02B** 1987-up Toyota Harness **LSAAB** 2002-up Toyota/Lexus Antenna Adapter		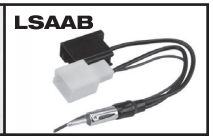

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (TA2114B) in 2012-Up Toyota Prius C vehicles. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

©2012 SCOSCHE INDUSTRIES, INC.

FACTORY STEREO REMOVAL

2012-UP TOYOTA PRIUS C

1. With a panel removal tool unclip and remove radio bezel.
2. Extract (4) Phillips head screws securing stereo, unplug and remove.

MOUNTING THE STEREO

SINGLE DIN MOUNT

1. Attach 6552 pocket to 7385 panel using supplied screws
2. Attach 7386 and 7387 brackets to 7385 panel with supplied screws.
3. Align and attach aftermarket single din stereo to the panel and bracket assembly using the screws supplied with the stereo. **Note:** If hardware is not supplied with aftermarket stereo, try using screws removed from factory stereo.
4. Reconnect stereo and finish assembly.

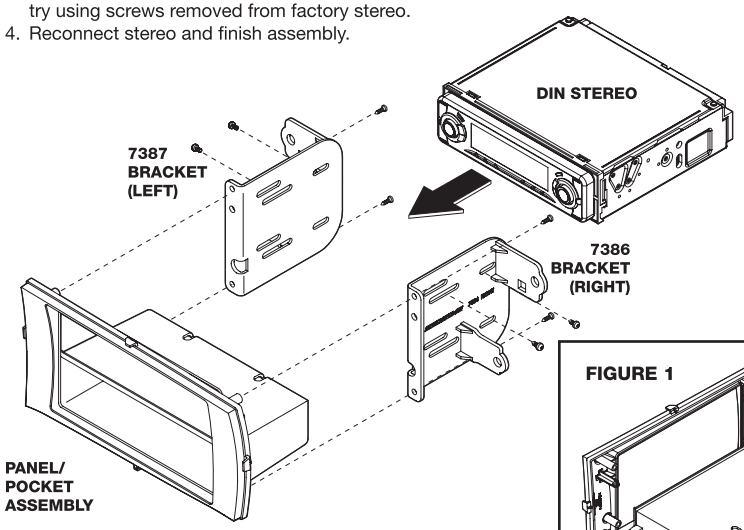

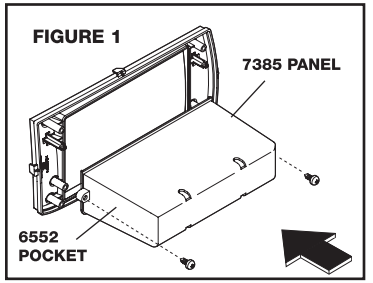

DOUBLE DIN MOUNT

1. Attach 7386 and 7387 brackets to 7385 panel with supplied screws.
2. Align and attach aftermarket double din stereo to the panel and bracket assembly using the screws supplied with the stereo. **Note:** If hardware is not supplied with aftermarket stereo, try using screws removed from factory stereo.
3. Reconnect stereo and finish assembly.